







# FEATURES AND FUNCTIONS OF YOUR TOMY WALKABOUT PLATINUM DIGITAL

## CONNECTION STATUS

The Parent and Baby Unit will automatically try to find each other upon switching on. This search feature will be represented by a flashing link icon **B8** **P12** and an animated figure of eight on both units LCD display. Once a connection is made the link icon will be permanently displayed and the animated figure of eight will be replaced with the current temperature, **B4** **P4**.

### No connection

Should your monitor be unable to establish a connection or should the connection break during transmission the temperature will be replaced with a flashing double line and a continuing beep will sound (through the parent unit) until a connection is re-established. To re-establish a connection move the units back within range, if necessary you may wish to reset your monitor by switching both units 'off' and 'on' again.

## COMMUNICATION RANGE

Your monitor has been carefully designed to operate at its best within a generous 300 meter range\* which is suitable for the majority of most household environments.

Although this monitor has a range of 300 meters (in optimum conditions) a baby should never be left unattended at a distance which could delay prompt adult attention.

For best performance we recommend both units are operated using the mains adaptors supplied.

### Out of range

As your Parent Unit approaches the range limit, reception may become intermittent. Should your Parent Unit go beyond the range limit the speaker will automatically mute and the Baby and Parent units will lose contact, at this point the 'loss of connection' alarm (continuous beeping) will activate and the temperature will be replaced with a flashing double line until a connection is re-established. To re-establish a connection move the units back within range.

## CHARGING AND PORTABLE USE

Both units are designed for portable use as well as mains operation.

### PARENT UNIT

The Parent Unit contains a rechargeable battery. IMPORTANT! The battery must be charged for a minimum of 16 hours before being used for the first time. To monitor your baby during charging place the Take-Out unit within the cradle and switch 'ON' by pressing the POWER/LIGHT Button.

### To charge/recharge

Connect the recharging cradle **P9** to the mains via the adaptor, the green light **P8** on the front of the cradle will gently glow.

Place the Take-Out Unit into the cradle, the unit will make a 'beep' and the green light **P8** will glow brighter indicating a connection has been made and charging has begun.

Throughout charging the animated battery icon **P11** will display the charging status. When fully charged all four bars within the icon will be displayed permanently.

An initial full charge will take a minimum of 16 hours and will last approximately 10 hours.

After the initial 16 hour charge further charging will take approximately 10 hours.

### BABY UNIT:

The Baby Unit can be mains or battery operated.

The Baby Unit requires 4 x AA (LR6) 1.5v batteries which are not included.

To insert batteries unscrew the battery compartment cover **B11** and insert 4XAA (LR6) batteries ensuring the '+' & '-' are positioned correctly. Replace the compartment cover, your unit is now ready for portable use.

We recommend the use of disposable alkaline batteries. Rechargeable batteries may give inferior performance.

Always remove batteries from the Baby Unit if using the main's adaptor for long periods of time.

## BATTERY STATUS

During portable use the battery status will be displayed via the battery icon on each unit's LCD Display **B7** **P11**.

### LOW BATTERY WARNING

When the batteries begin to run low in either unit, the Parent Unit will alarm to indicate that the batteries need recharging or replacing, as follows:

#### Audible Alarm

2 Beeps every 60 seconds: Baby Unit Low Battery (through the Parent Unit).

3 Beeps every 60 seconds: Parent Unit Low Battery.

NOTE! Audible beeps are only emitted through the Parent Unit so as not to disturb your baby.

#### Visual Alarm

When the battery begins to run low within the Parent Unit the Battery Status Symbol **P11** will continuously flash on the Parent Unit's LCD Display. When batteries run low within the Baby Unit the Battery Status Symbol **B7** & **P11** will flash on both the Baby and Parent Unit's LCD Displays.

## MOVING LIGHT DISPLAY

Tomy's classic moving light display located on your Parent Unit **P13** allows you to monitor your baby without sound - ideal for those quiet moments.

The light display consists of 5 green and 3 red coloured lights - the louder the noise of your baby, the more lights will illuminate.

The light display is always active whilst your monitor is switched on and connected.

## VOLUME CONTROL

The listening volume through your Parent Unit can be adjusted from levels 0-9, via the VOLUME +/- controls **P15**. Each press will adjust the volume by one step.

Each time the volume is adjusted the parent unit will beep and briefly display the adjusted level on the LCD display **P3**.

Selecting level 0 will mute the sound allowing you to monitor using the light display.

## TALKING BACK TO YOUR BABY


The Talk Back function allows you to talk to and reassure your baby by transmitting sound from your Parent Unit to the Baby Unit.

Press and hold the TALK button **P2**, and speak clearly into the Parent Unit's microphone **P7**. It is important that the button is held down whilst talking.

The large digits on both unit's LCD displays will animate in a circular motion throughout Talk-Back **P4** **B4**.

### Talk-Back volume

To adjust the Talk-Back volume press and hold the TALK button **P2** with VOLUME +/- **P15**. The Talk Back volume can be adjusted from levels 1-9. Each press will adjust the volume by one step. The volume will be briefly displayed via the large digits on the Parent Unit's LCD display **P4**.

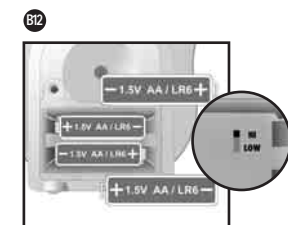

Baby Unit Battery Compartment  
+  
Vibrate Alert  
HI- LO sensitivity switch



# PROBLEM SOLVING

If a fault occurs, please check the points listed below. If you are unable to rectify the problem yourself, please contact our Careline.

| PROBLEM  | POSSIBLE CAUSE   | SOLUTION  | PAGE |
|--|--|---|------|
| No sound coming through your Parent Unit.              | Rechargeable battery within the Parent Unit has started to run low.                                      | Place Take-Out Unit within cradle and recharge.   | 8    |
|  | Batteries within the Baby Unit have started to run low.  | Check and if necessary replace batteries.   | 8    |
|  | Adaptor not connected or connected incorrectly.  | Check adaptor connection.   | 9    |
|  | Volume on Parent Unit is set too low.  | Increase Parent Unit volume.  | 8    |
| Units are out of range.                                |  | Move units within range.  | 8    |
|  |  |   |      |
| No electrical function – Parent Unit                   | Rechargeable battery within Parent Unit has run down.<br>Adaptor not connected or connected incorrectly. | Place Take-Out Unit within cradle and recharge.<br>Check adaptor connection.  | 8    |
| No electrical function – Baby Unit                     | Batteries are inserted incorrectly.  | Check batteries' polarity.  | 8    |
|  | Batteries have run down.   | Check and replace batteries if necessary.   | 8    |
|  | Adaptor not connected or connected incorrectly.  | Check adaptor connection.   |      |
| Poor / Intermittent reception                          | Transmitter and receiver are too far apart.  | Move Units closer.  | 8    |
|  | Batteries are low or dead.   | Recharge/replace batteries or power via the mains.  | 8    |
| High pitched noise                                     | Units are too close together.  | Move Units apart.   | 8    |
|  | Volume too high.   | Decrease volume.  | 9    |
| Night Light does not work                              | Night Light is not switched on.  | Turn Night Light on.  | 11   |
|  | Batteries have run down.   | Replace batteries or power via mains operation.   | 8    |
| Night Light keeps switching OFF                        | Powering the Baby Unit with batteries.   | The Night Light is designed to switch off automatically after 5 minutes to conserve battery life.                                     | 11   |
| Night Light stays constantly ON and will not fade out. | Powering the Baby Unit via the mains.  | The Night Light is designed to remain active until switched off.  | 11   |
| Talk Back not functioning                              | You are not holding the TALK button throughout Talk Back.  | Hold TALK button continuously whilst talking.   | 9    |
|  | Talk Back volume set too low.  | Adjust TALK Back volume, to a higher level.   | 9    |
| Unable to adjust the Talk Back volume                  | You are not holding the TALK button at the same time as adjusting the VOLUME +/- controls.               | Hold the TALK button and adjust volume.   | 9    |
| Battery life after charging is becoming shorter.       | Battery needs replacing.   | Contact our Careline for replacements.<br>NOTE: Replacement rechargeable batteries are guaranteed for 6 months from date of purchase. | 14   |