

DECLARATION OF CONFORMITY

Tomy declare that the Walkabout Premier Advance:

1. Is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC.
2. Has been tested to all essential radio test suites.
3. Is in conformity with all applicable essential requirements of all applicable EC Directives.
List of reference standards: EN301489-1, EN301489-3, EN55014-1, EN55014-2, EN61000-3-2, EN61000-3-3, EN60065, EN60335-2-29, EN50366, EN50371, EN300-220-1, EN300220-3, EN61558-2-6.

Permitted countries of use: UK, Eire only.

This declaration is issued under the sole responsibility of Tomy UK Ltd., Totton, Hants, SO40 3SA. ENGLAND.

Head of Product Integrity

TECHNICAL SPECIFICATION

Power Supply: Mains adaptor rating: PRI: 230V ~ 50Hz SEC: 7.5V = 200mA 2VA

Batteries: Parent Unit - Rechargeable Ni MH battery (included). Baby Unit - Requires 4 x 1.5v AA (LR6) batteries.

Operating Range: 300m* in optimum 'open field' conditions.

Operating Temperature: 0 - 50°C

Frequencies - 49.820 - 49.980MHz

Transmission Power: <10mW.

CUSTOMER CARE INFORMATION

Before you call, please read this instruction manual carefully.

When calling the Tomy Careline, please quote the model number of your Tomy Walkabout Premier Advance which is 1244 and the date of purchase: ___ / ___ / ___

Contact us by calling 023 80662600 or by writing to us at TOMY Careline, PO BOX 20, Totton, Hants, SO40 3YF or by clicking online at www.tomy.co.uk. Telephone lines open Monday to Friday 9am-5pm, some calls may be monitored as part of our ongoing commitment to customer excellence.

If your monitor requires servicing, please send it to the Tomy Monitor Service Centre which offers a 48 hour express turnaround service. Tomy Monitor Service Centre, Units 6/9 South Hampshire Ind. Park, Brunel Road, Totton, Hampshire, SO40 3SA.

Please retain your proof of purchase to validate your guarantee. Full details of your guarantee can be obtained by contacting the Tomy Careline (details above). Please note your monitor is guaranteed against manufacturing defects for two years, the rechargeable battery within the parent unit is guaranteed for one year from the date of purchase. This does not affect your statutory rights.



Tomy UK Ltd., Totton, Hants. SO40 3SA, England.

Please retain for future reference.

* in optimum 'open field' conditions.

TUK
12/04
Ref No. 1244
Made in China

TOMY®

Walkabout Premier ADVANCE THE MULTIFUNCTIONAL PORTABLE MONITOR



INSTRUCTIONS FOR USE

We are delighted that you have chosen the Tomy Walkabout Premier Advance to monitor your child. It is a high performance monitor with advanced, unique technology specifically designed for Tomy Monitors. This monitor combines many useful features including:



2 way transmission of sound allowing you to talk to your baby as well as listen.

4 Channel Selection for clear reception and reduced interference.

A secure link and privacy feature which prevents others from listening in.

Sound-Activated transmission – An option to set your monitor to Sound-Activated transmission only (to conserve battery power).

Tomy's original pioneering Moving Light Display - a great addition for monitoring with or without sound.

A reassuring soft glow Night Light on the Baby Unit which can be remotely operated from the Parent Unit.

Monitoring and displaying the temperature of your baby's room onto the Parent and Baby Unit.

Fully portable Parent and Baby Units.



PLEASE READ INSTRUCTIONS CAREFULLY BEFORE USE AND RETAIN FOR FUTURE REFERENCE.

INDEX

BEFORE YOU START 6

- Safety Information
- Battery Safety
- Caring for Your Monitor

QUICK START 7

FEATURES AND FUNCTIONS 8

- Connection Status
- Communication Range
- Channel Selection
- Charging and Portable Use

9

- Low Battery Warning
- Moving Light Display
- Volume Control
- Sound-Activated Transmission

10

- Talking Back to Your Baby
- Temperature Monitoring
- Night Light

11

- Belt Clip
- Wall Mounting



FREQUENTLY ASKED QUESTIONS

PROBLEM SOLVING 12

DECLARATION OF CONFORMITY 14

TECHNICAL SPECIFICATION 14

CUSTOMER CARE INFORMATION 14

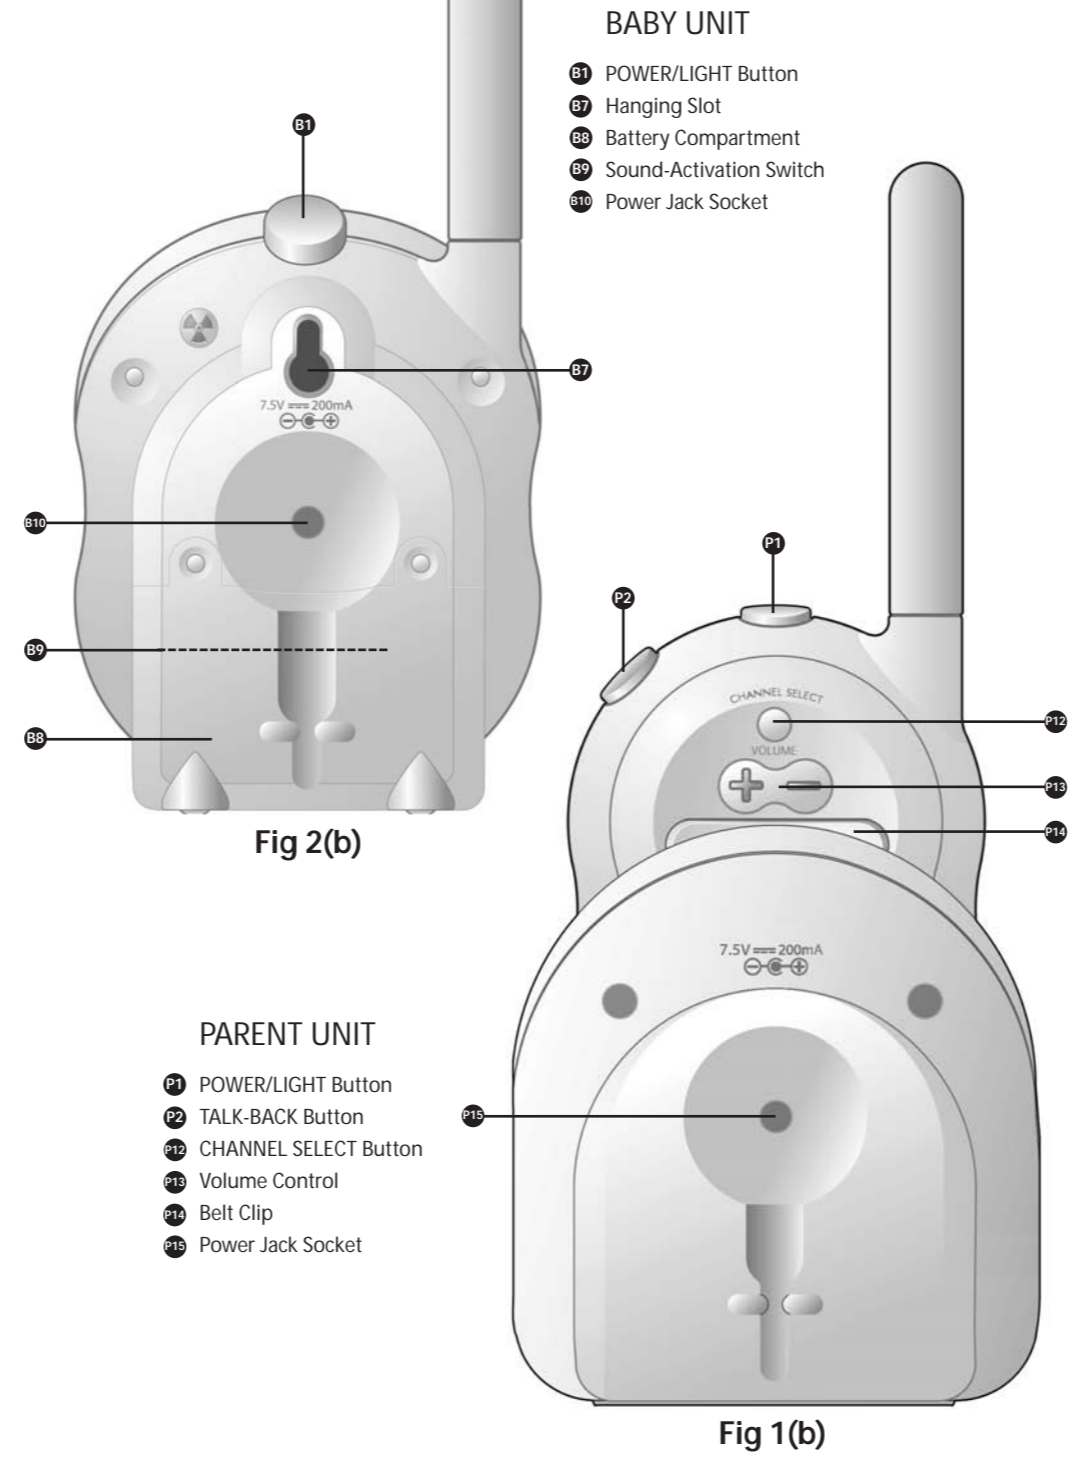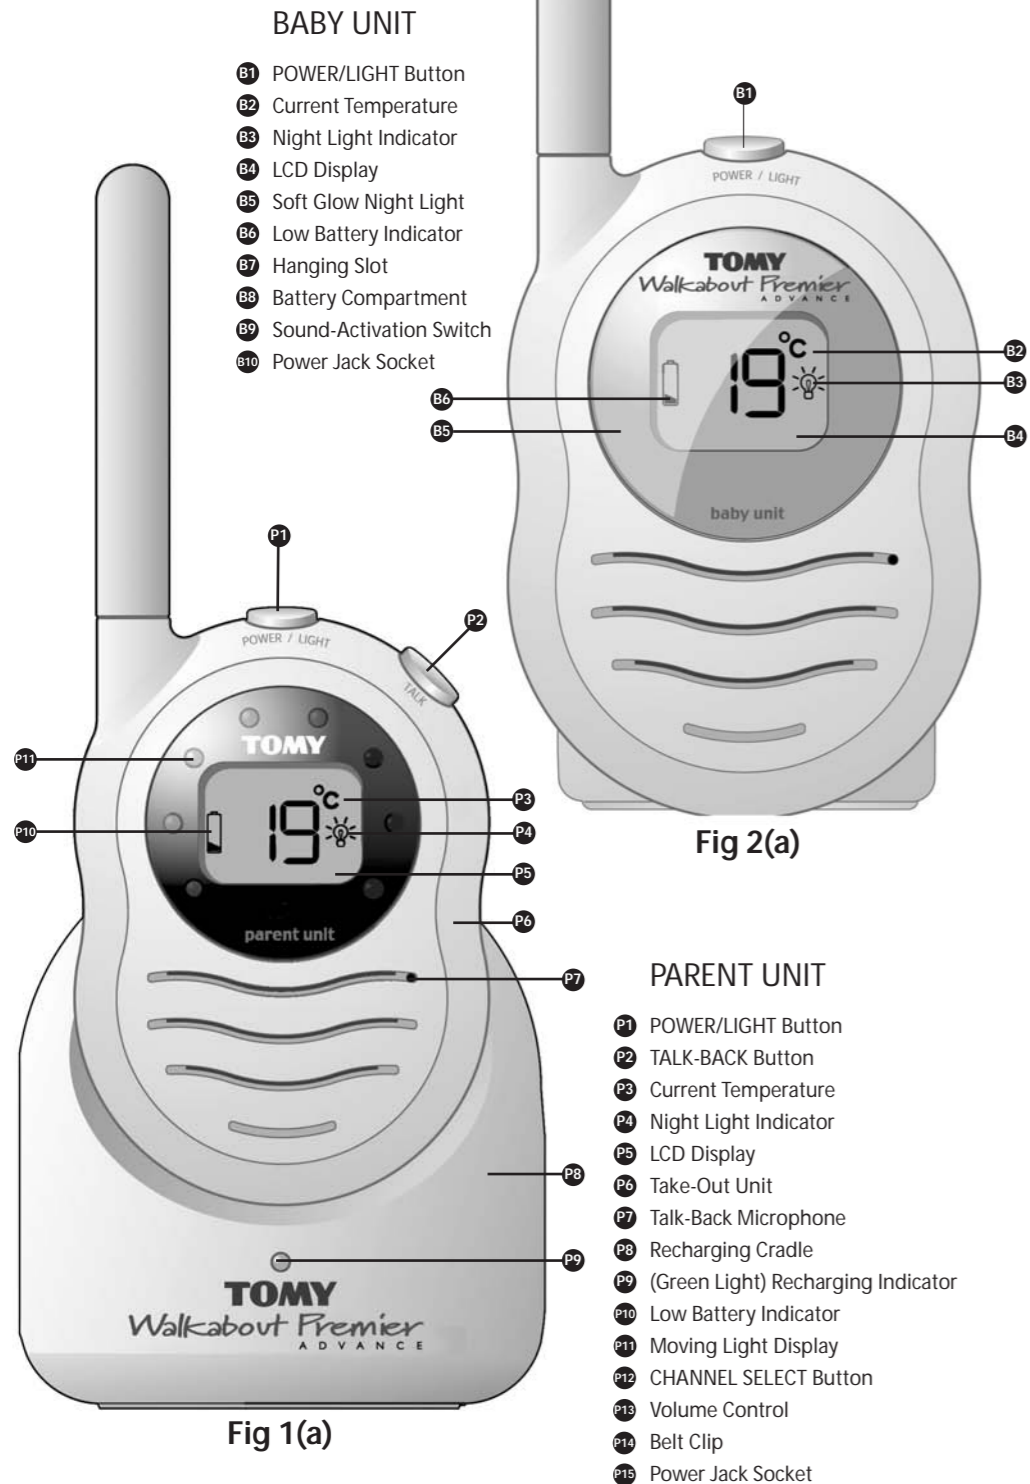

BEFORE YOU START

SAFETY INFORMATION

The Tomy Walkabout Premier Advance is designed to help you monitor your child and is not a substitute for adult supervision.

Always keep electrically operated items and their cables out of reach of babies and younger children.

Under no circumstances should the adaptors supplied with this monitor be used with any other equipment.

No other adaptors than those supplied should be used with your monitor.

Be careful not to position the adaptor where a child is likely to use it as a step. Putting weight on the adaptor whilst it is plugged in could damage the unit or cause injury to your child.

Under no circumstances should you place any part of your monitor in or on a cot.

Ensure all wiring is positioned safely so that children cannot become entangled and no trip hazard is created.

The adaptors may become hot during use – take care when handling, allow heat to disperse. DO NOT COVER. Disconnect adaptor if the product will not be used for several days. To prevent a shock hazard, please disconnect from power supply before cleaning.

The rechargeable battery within the Parent Unit should be recycled, do not dispose in normal waste. Do not attempt to dismantle any part of this product.

This product is not a toy.

BATTERY SAFETY

Take special care to ensure batteries are inserted correctly, observing (+) and (-) marks on battery and product. Removal and replacement of batteries should be carried out by an adult or under adult supervision. Do not attempt to recharge non-rechargeable batteries.

If you are using rechargeable batteries within the Baby Unit, they must be removed from the monitor before recharging. Removal and recharging of rechargeable batteries should be carried out by an adult or under adult supervision. Do not short circuit the contacts in the battery compartment or the battery terminals.

Remove exhausted batteries from product. Do not mix old (used) and new batteries or batteries of different types, eg. rechargeable and alkaline or batteries of different makes/brands. Dispose of exhausted batteries safely, and never dispose of batteries in a fire. Remove batteries from product after use or if storing for long periods. Only use batteries of the same or equivalent type to those recommended.

CARING FOR YOUR MONITOR

Do not immerse any parts in liquids.

Do not place in direct sunlight.

Periodically check product for signs of damage to electrical parts and do not use until damage has been properly examined.

Always remove batteries from the Baby Unit if using the mains adaptor for long periods of time.

QUICK START

Please refer to the fold out pages at the front of this booklet for detailed product illustrations; you will find it useful to refer to these whilst reading this booklet.

IMPORTANT! Your monitor can be used immediately by operating via the mains. However if you require portable monitoring the Take-Out unit must be charged for a minimum of 14 hours before use. You can monitor your child whilst charging; please refer to portable use within these instructions.

Plug in both Units.


Place the Baby Unit within 1metre (3 feet) of your baby ensuring all parts are kept out of reach. Under no circumstances should you place any parts of the monitor in or on a cot.

Ensure both units are more than 2 metres (6 feet) apart.

To activate, press the POWER/LIGHT button on both the Baby Unit **B1** and Parent Unit **P1**. (IMPORTANT! To establish a quicker connection, activate the Baby Unit before the Parent Unit)

Once a connection is made the animated figure of eight on both units' LCD displays will be replaced by the temperature **B2 P3** and the transmission of sound will begin.

To turn the units off, press and hold the Power/Light button on both units for two seconds **B1 P1**.

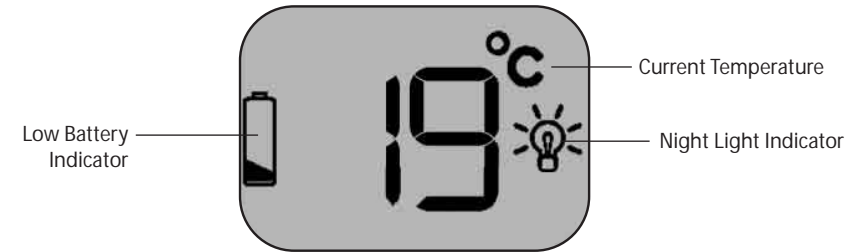

Baby and Parent Units LCD Displays (B4/P5)

SOUND-ACTIVATED TRANSMISSION

Your monitor has a Sound-Activated Transmission feature. Once this power saving feature is switched on the Parent Unit will remain silent (no transmission) until your baby stirs.

To change between continuous transmission or Sound-Activated Transmission, unscrew the Baby Unit's battery compartment, remove any batteries and move the switch to your preferred choice **B9** (see illustration Page 9).

TALKING BACK TO YOUR BABY

The Talk-Back function allows you to talk to and reassure your baby by transmitting sound from your Parent Unit to the Baby Unit

Press and hold the TALK button **P2** and speak clearly into the Parent Unit's microphone **P7**. It is important that the button is held down whilst talking. (Note: Normal monitoring will be temporarily suspended whilst using Talk-Back.)

The large digits on the LCD Display on both units **B4 P5** will display in a circular motion throughout Talk-Back.

Talk-Back volume

To adjust the Talk-Back volume press and hold the TALK Button **P2** together with Volume +/- **P13**. The Talk-Back volume can be adjusted from levels 1-9, each press will adjust the volume by one step. The volume will be displayed briefly via the large digits on the Parent Unit's LCD Display **P5**.

MONITORING THE ROOM TEMPERATURE

The Baby Unit displays the temperature **B2** of the room it is in and also transmits the temperature to the Parent Unit **P3**.

This feature measures room temperature in °C and is accurate to an approximate tolerance of ±1°C.

The temperature measured by the Baby Unit will be displayed on both Parent and Baby Unit's LCD display **B2 P3**.

IMPORTANT! The temperature device within your Tomy Walkabout Premier is only designed to monitor room temperature in which the Baby Unit is placed. It cannot and must not be used to measure any other temperature (e.g. that of your child).

NIGHT LIGHT

The Baby Unit has a reassuring soft glow Night Light **B5** which can be operated by both Parent and Baby Units by pressing the POWER/LIGHT button on either unit **B1 P1**. (Note: Holding the POWER/LIGHT button for more than 2 seconds will turn your monitor off).

When active the Night Light icons will appear on the both units' LCD Display **B3 P4**.

If powering the Baby Unit with the use of batteries, the Night Light function will fade out after 5 minutes, otherwise the Night Light will remain illuminated until switched off.

Please Note: Both units must be switched 'on' and connected before the Night Light can be operated.

BELT CLIP

Attach the Take-Out Unit **P6** to a belt or clothing using the clip at the back of the unit **P14**.

WALL MOUNTING

The Baby Unit can be mounted on a wall using the hanging slot on the reverse of the unit **B7**. Ensure that the unit is safe and secure out of children's reach and away from the cot.

Ensure all wiring is made safe and is fixed so that children cannot become entangled and that no trip hazard is created.



Belt Clip **P14**

FREQUENTLY ASKED QUESTIONS

- Q.** Does my Parent Unit need to be switched on or off whilst charging?
- A.** *Either! - Your Take-Out Unit will charge whilst switched on or off, however charging the unit whilst switched on will allow you to monitor your child whilst charging.*
- Q.** Why do I need to charge my Take-Out Unit for 14 hours before first portable use?
- A.** *Due to the nature of rechargeable batteries it is recommended that they are fully charged before first use. It is proven that this helps to extend the overall lifespan of your battery.*
- Q.** How do I know when my monitor is fully charged?
- A.** *Your monitor requires a minimum of 12 hours to fully charge (14 hours initially). Your monitor is constantly charging when placed within the cradle.*
- Q.** Why do I still get interference even after channel selection has been performed?
- A.** *This could be due to your local environment. Overhead power cables, local radio transmitters, tall buildings, similar monitoring/radio equipment operating in your local area may create interferences.*
- Q.** I have measured the temperature of my baby's room using a another device and I get a different reading than that of my monitor. Why?
- A.** *The temperature measuring device within your Walkabout Premier Advance is designed to give you an indication of the baby's room temperature to within an approximate tolerance of ± 1°C. The Tomy Walkabout Premier Advance is not intended to be as accurate as some medical devices.*
- Q.** Is the rechargeable battery within my Take-Out Unit replaceable?
- A.** *Yes - Spare and replacement batteries can be purchased from our Tomy Careline.*
- Q.** Where can I obtain spare and replacement parts for my Tomy Walkabout Premier Advance?
- A.** *Spare and replacement parts are available by contacting our Tomy Careline.*
- Q.** My monitor does not have the required range?
- A.** *The Walkabout Premier Advance is designed to have a range of approximately 300 metres in optimum (open field) conditions. Environmental obstructions such as overhead power cables, local radio transmitters, tall buildings etc may reduce the range. For best performance we recommend operating your monitor using the mains adaptors supplied. If problem persists please contact the Tomy Careline.*

PROBLEM SOLVING

If a fault occurs, please check the points listed below. If you are unable to rectify the problem yourself, please contact our Careline.

PROBLEM	POSSIBLE CAUSE	SOLUTION	PAGE
No sound coming through your Parent Unit.	Units are less than 2 metres apart.	Move Units further apart.	8
	Rechargeable battery within the Parent Unit has started to run low.	Place Take-Out Unit within cradle and recharge.	8
	Batteries within the Baby Unit have started to run low.	Check and if necessary replace batteries.	9
	Adaptor not connected or connected incorrectly.	Check adaptor connection.	9
	Volume on Parent Unit is set too low.	Increase Parent Unit volume.	9
Parent Unit remains silent or only becomes active intermittently.	Units are out of range.	Move units closer.	8
	Units are set to Sound-Activated transmission.	Refer to Sound-Activated Transmission within this instruction leaflet to switch units to continuous transmission.	10
No electrical function – Parent Unit	Rechargeable battery within Parent Unit has run down. Adaptor not connected or connected incorrectly.	Place Take-Out Unit within cradle and recharge. Check adaptor connection.	8
No electrical function – Baby Unit	Baby Unit has automatically switched off because the connection between Units remained broken for more than five minutes.	Switch the Baby Unit back on.	7
	Batteries are inserted incorrectly.	Check batteries' polarity.	9
	Batteries have run down.	Check and replace batteries if necessary.	9
	Adaptor not connected or connected incorrectly.	Check adaptor connection.	9
Poor reception/interference	Transmitter and receiver are too far apart.	Move Units closer.	8
	Local interference from other devices.	Press 'Channel Select' to change to another frequency.	8
	Batteries are low or dead.	Recharge/replace batteries or power via the mains.	8
High pitched noise	Units are too close together.	Move Units apart.	8
	Volume too high.	Decrease volume.	9
Sound-Activated transmission will not activate	Sound-Activated transmission has not been activated despite moving the switch.	Turn both Parent and Baby Units 'OFF' and back 'ON' again to activate.	10
Night Light does not work	Night Light not switched on.	Turn Night Light on.	10
	Batteries have run down.	Check and or replace batteries or power via mains operation.	9
Night Light keeps switching OFF	Powering the Baby Unit with batteries.	The Night Light is designed to switch off automatically after 5 minutes to conserve battery life.	10
Night Light stays constantly ON and will not fade out.	Powering the Baby Unit via the mains.	The Night Light is designed to remain active until switched off.	10
Talk Back not functioning	You are not holding the TALK button throughout Talk Back.	Hold TALK button continuously whilst talking.	10
	Talk Back volume set too low.	Adjust Talk Back volume to a higher level.	10
Unable to adjust the Talk Back volume	You are not holding the TALK button at the same time as adjusting the volume controls.	Hold the TALK button and adjust volume.	10
Battery life after charging is becoming shorter.	Battery needs replacing.	Contact our Careline for replacements. NOTE: Replacement rechargeable batteries are guaranteed for 6 months from date of purchase.	14